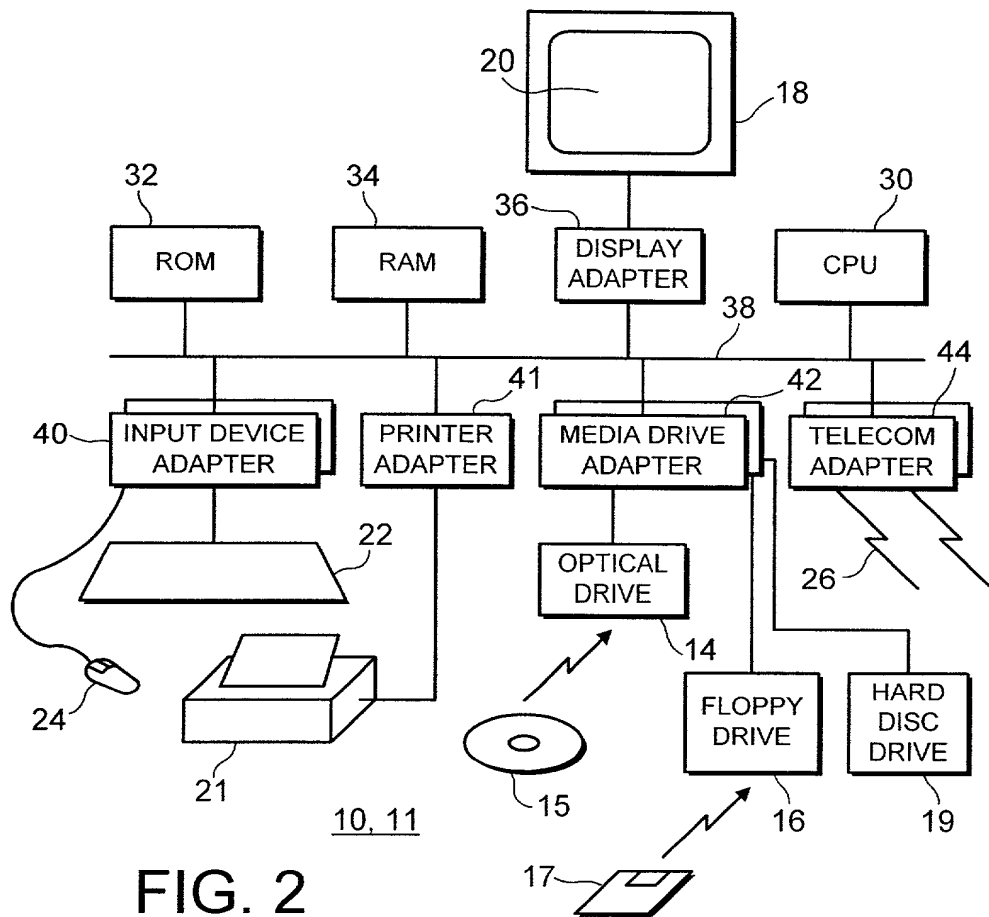
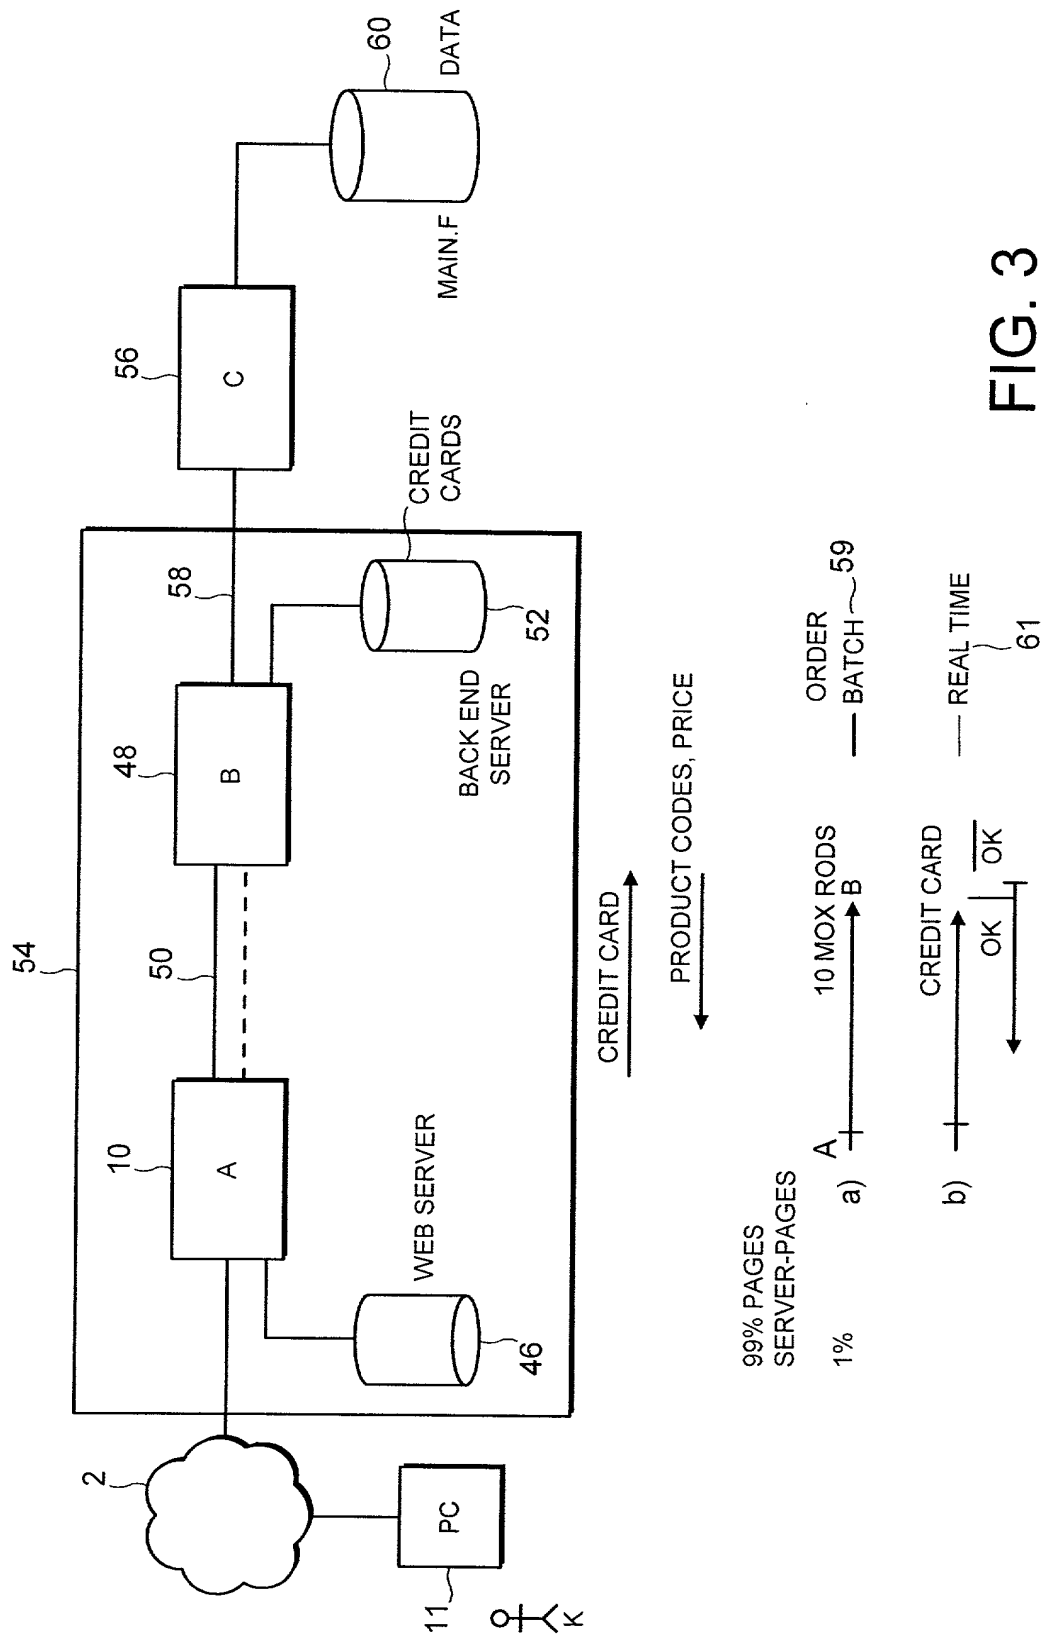


FIG. 1





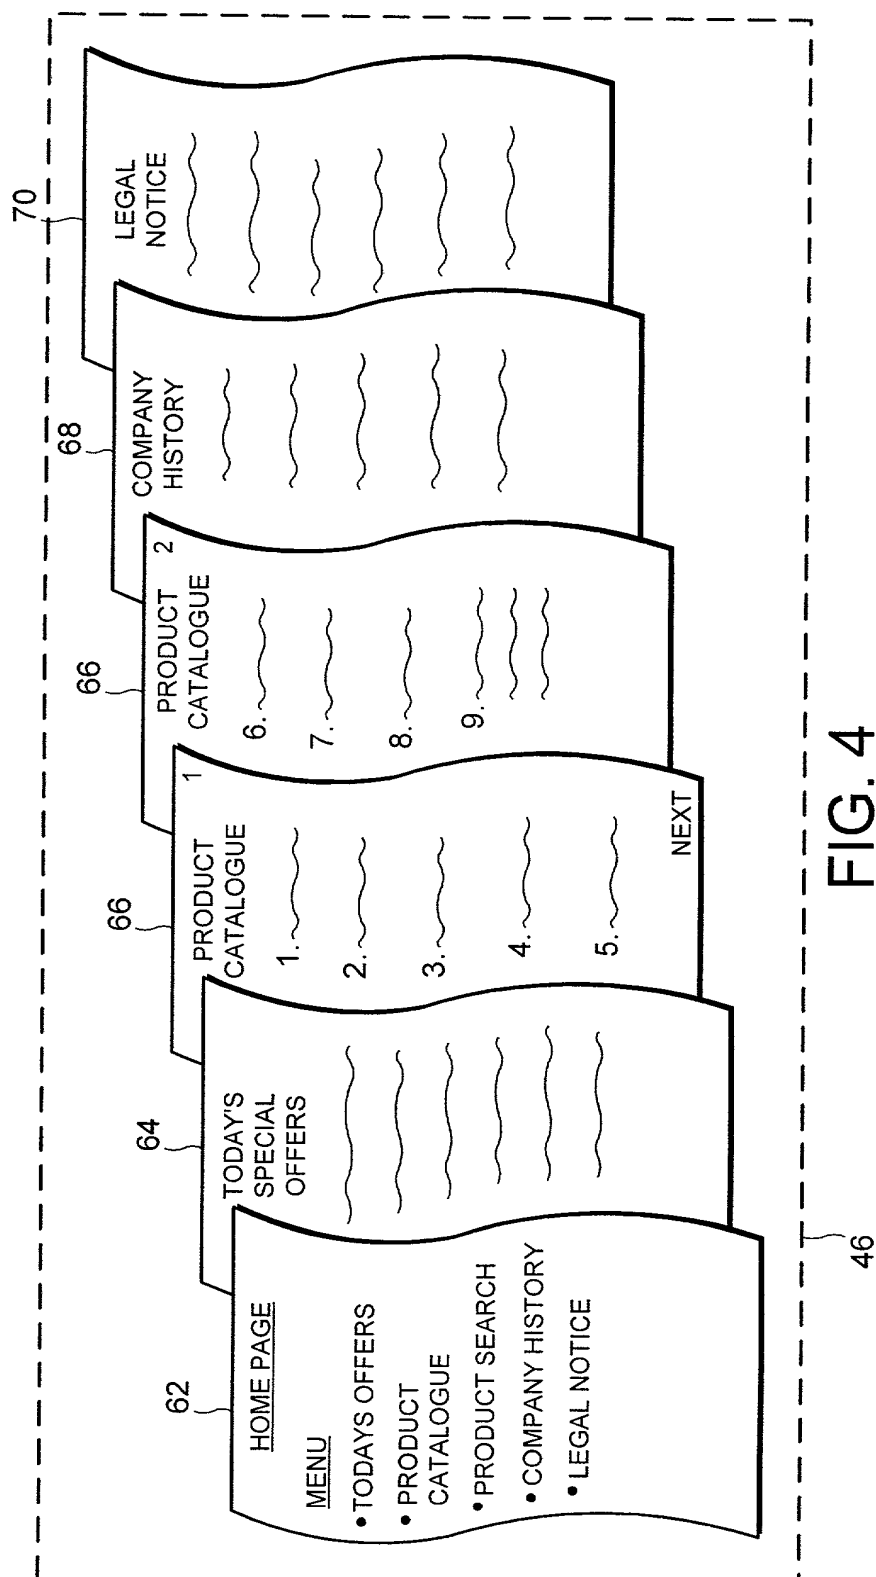


FIG. 4

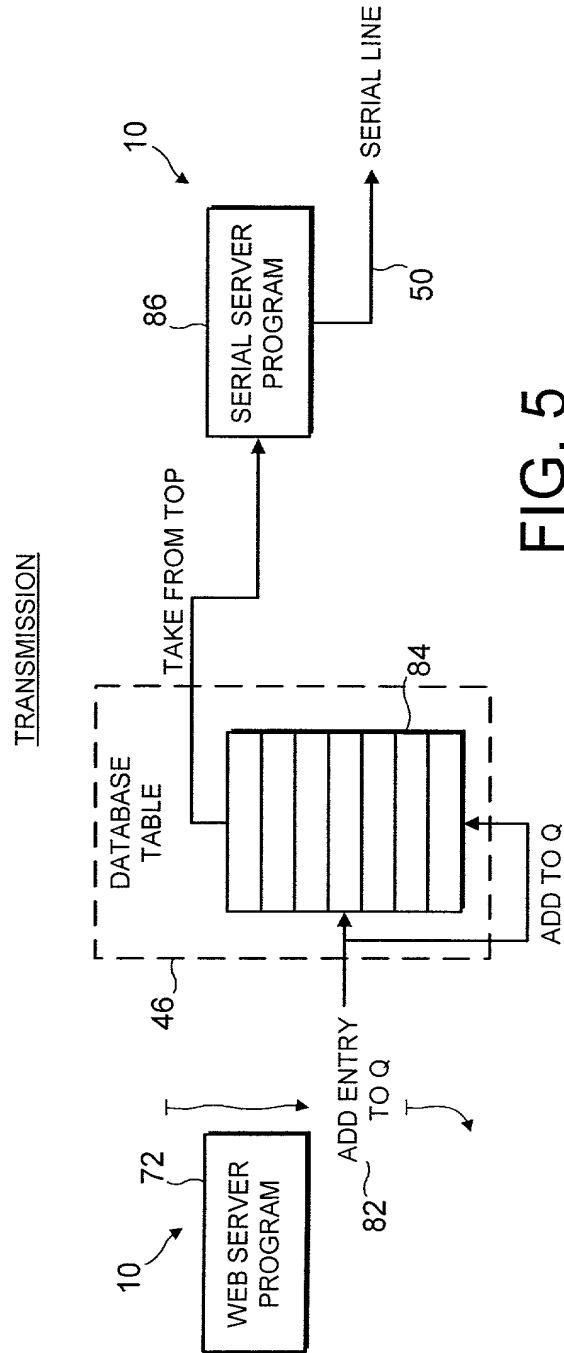


FIG. 5

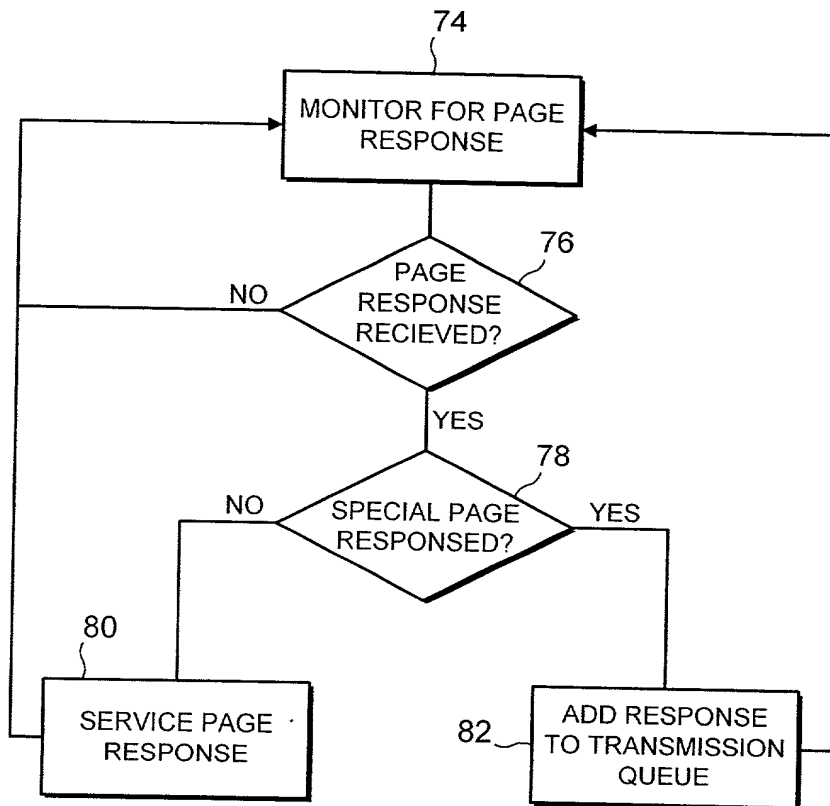


FIG. 6

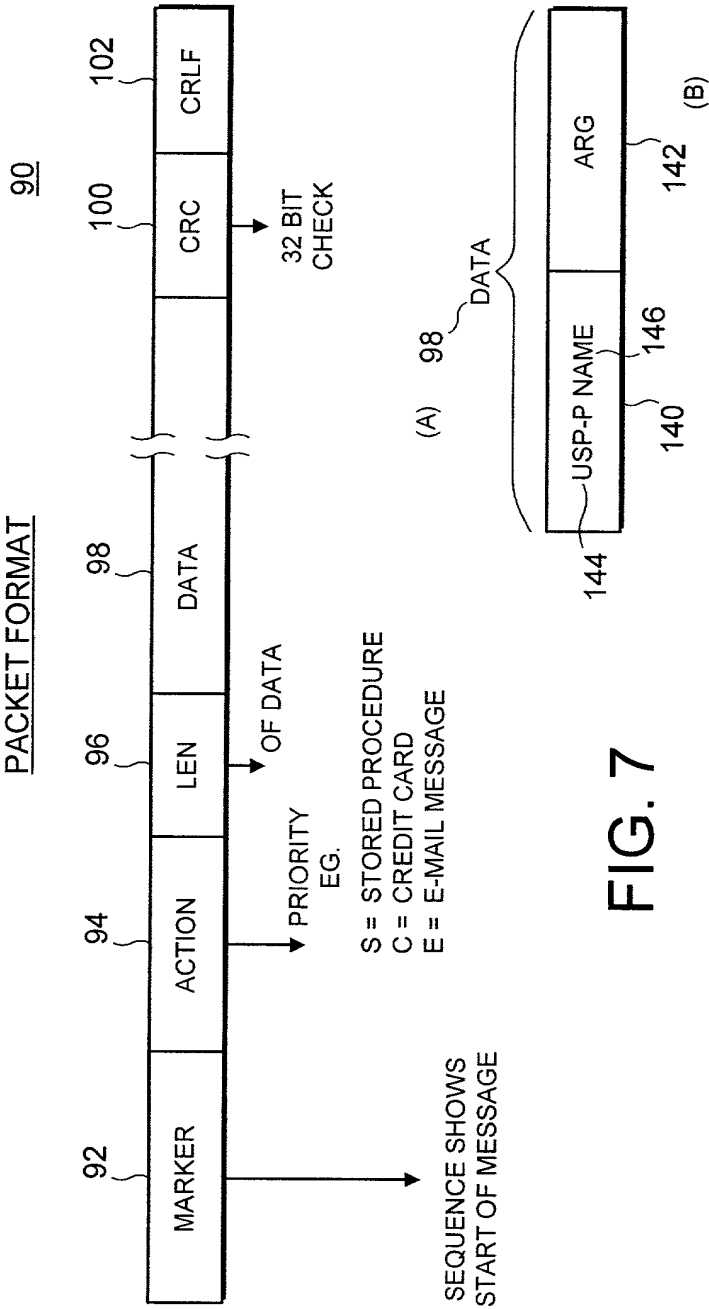


FIG. 7

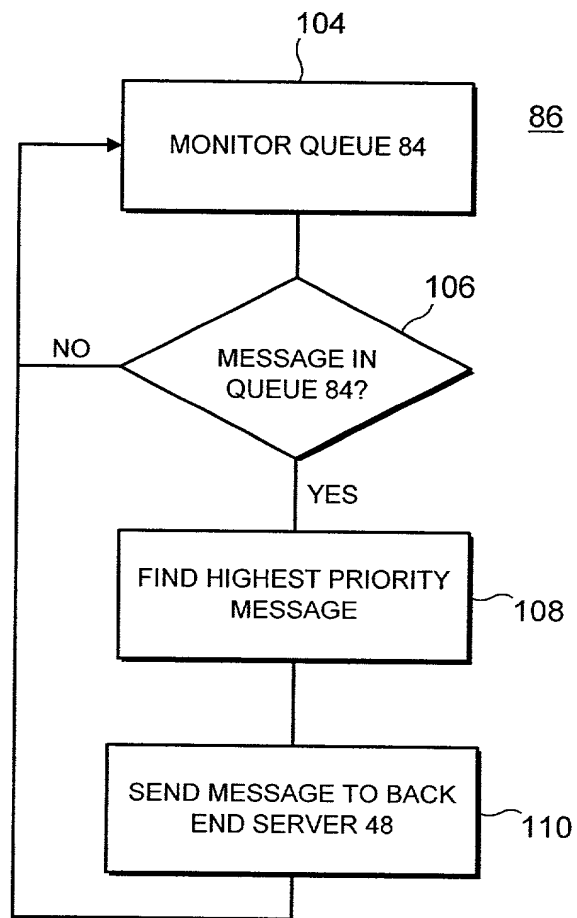


FIG. 8



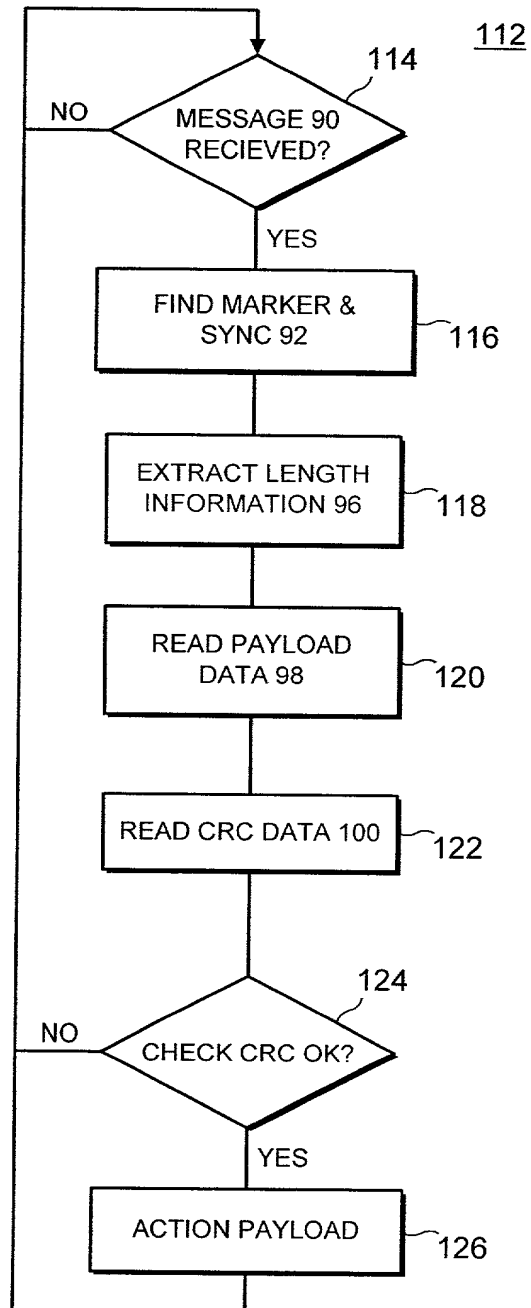


FIG. 9

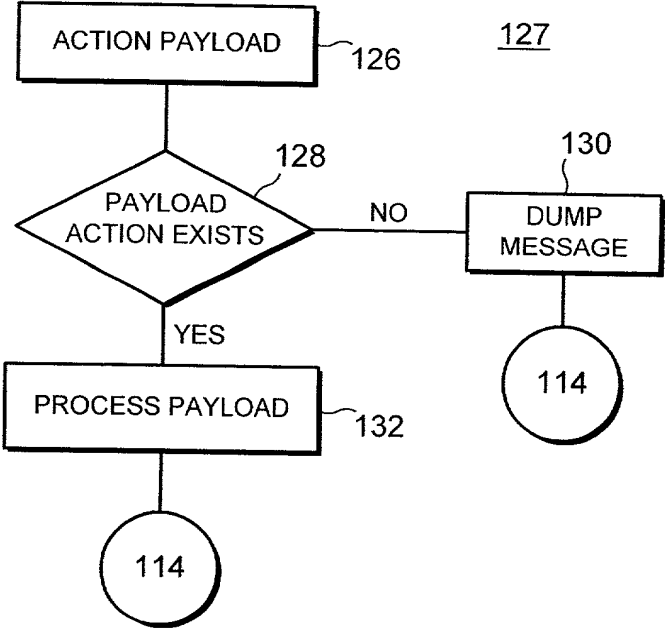


FIG. 10A


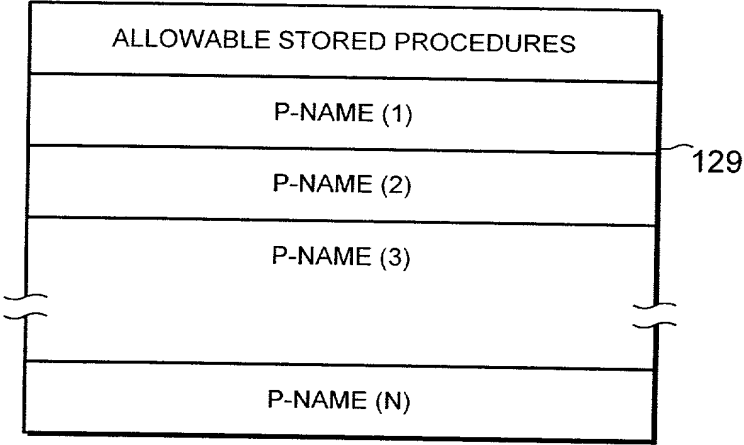


FIG. 10B

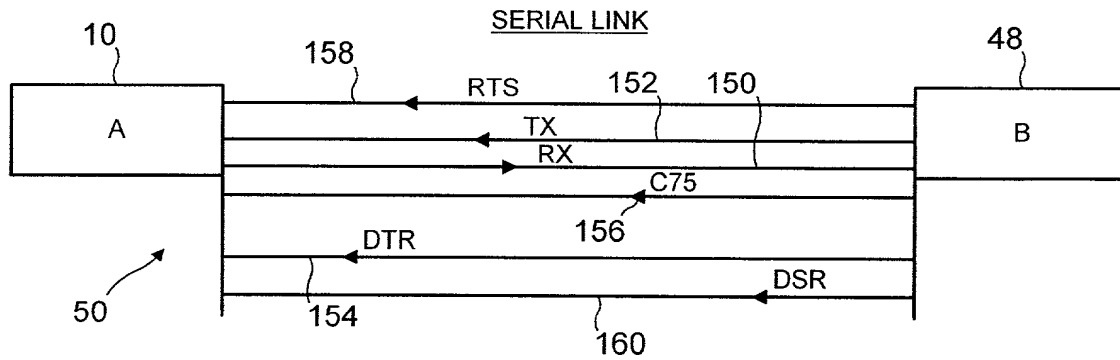

1. WHEN B IS DISCONNECTED A KNOWS THIS BY NOW ASSERTION OF DTR SIGNAL (NO HOST)
2. WHEN B IS BUSY IT ASSERTS C75 TO STOP A SENDING MORE DATA (FLOW CONTROL)

FIG. 11

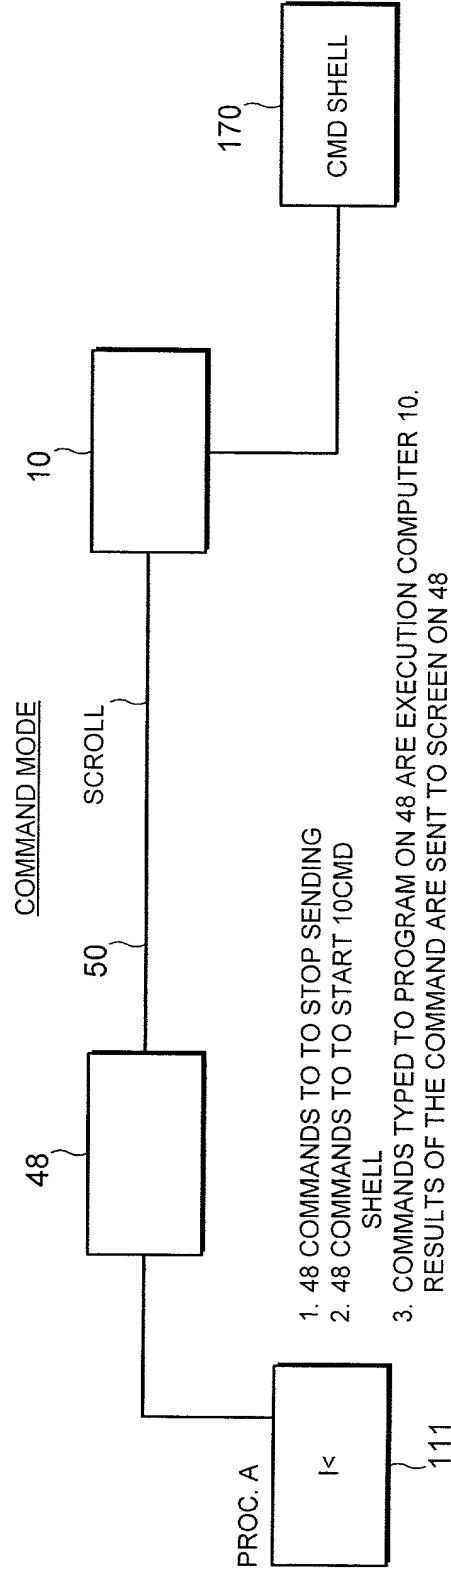


FIG. 12

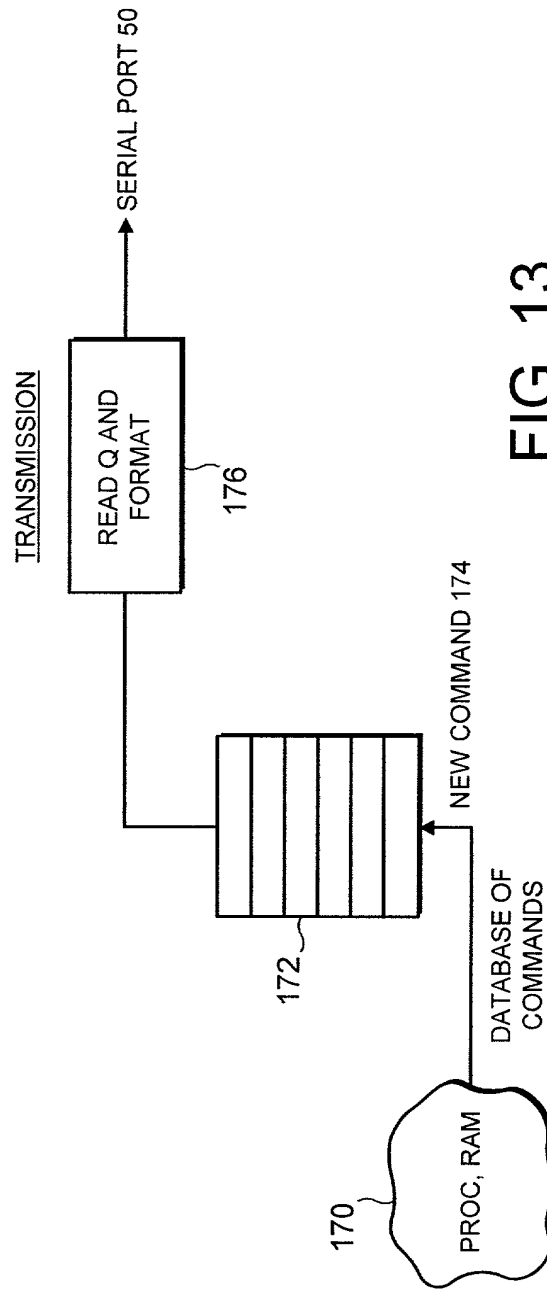


FIG. 13